

USER GUIDE | SMART-TOUCH CONTROLLER

SETTING THE TIME CLOCK

1 - TOUCH **MAIN MENU**

2 - TOUCH **PASSWORD** (BUTTON IN THE CENTER)

3 - ENTER PASSWORD: **1234**
- THEN PRESS **RETURN**

4 - TOUCH **OPERATION TIME-CLOCK**

5 - TOUCH DESIRED **MM/DD/YY**, NUMERICAL KEYPAD WILL APPEAR (LIKE IN STEP 3) TO SET SYSTEM DATE
- THEN PRESS **RETURN**

6 - TOUCH DESIRED TIME (HH:MM), NUMERICAL KEYPAD WILL APPEAR (LIKE IN STEP 3) TO SET SYSTEM TIME
- THEN PRESS **RETURN**

**HOUR MUST BE SET TO 24 HOUR TIME CLOCK
EX: 2 PM = 14:00**

7 - TOUCH **KEYPAD**, NUMERICAL KEYPAD WILL APPEAR (LIKE IN STEP 3)
- PRESS **NUMBER 1 TO 7** TO SET SYSTEM DAY OF THE WEEK (DAY 1 = SUNDAY, DAY 2 = MONDAY, ETC.)
- THEN PRESS **RETURN**

SETTING THE HOURS OF OPERATION

The controller allows you to have 2 separate periods of operation. If you choose to use only one period, leave Period 2 at 00:00

1 - TOUCH DESIRED **START TIME OR STOP TIME(HH:MM)**, NUMERICAL KEYPAD WILL APPEAR (LIKE IN STEP 3) TO SET OPERATING TIME
- THEN PRESS **RETURN**

2 - TOUCH THE DAYS WHERE OPERATIONAL HOURS ARE APPLIED TO
- LETTER WILL CAPITALIZE IF ACTIVATED
- THEN PRESS **RETURN**

3 PLEASE FOLLOW SIMILAR INSTRUCTIONS ON STEP 1 AND 2 TO SET PERIOD 2


ANY DISCREPANCY BETWEEN PERIOD 1 AND 2, THE PERIOD 1 WILL OVERULE

USER GUIDE | SMART-TOUCH CONTROLLER

SETTING THE PURGE FUNCTION


Used to purge standing water from your system prior to your opening

1

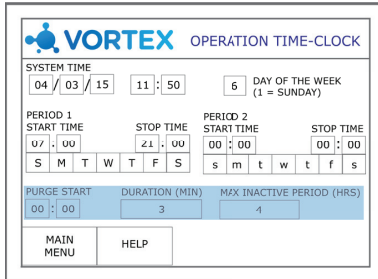

SHOULD BE SET 20-30 MINUTES PRIOR TO OPERATION START TIME


2

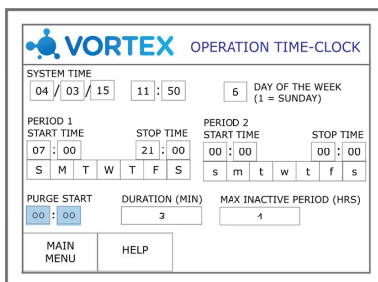

TOUCH **HH/MM**, NUMERICAL KEYPAD WILL APPEAR (LIKE IN STEP 3) TO SET OPERATING TIME - THEN PRESS **RETURN**


HOUR MUST BE SET TO 24 HOUR TIME CLOCK.
EX: 2 PM = 14:00

3

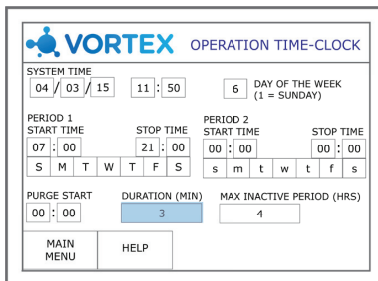

THIS IS HOW LONG THE SYSTEM WILL PURGE
- TOUCH **DURATION**
- SET TO **3-4 MINUTES (sufficient time for purge)**
- THEN PRESS **RETURN**

4

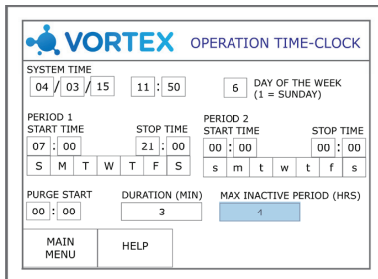


SCHEDULE PURGE IF THERE HAS NOT BEEN ANY USER ACTIVITY WITHIN SET PERIOD OF A NUMBER OF HOURS
- TOUCH KEYPAD
- SET TO **NUMBER OF HOURS DESIRED**
- THEN PRESS **RETURN**

SYSTEM WILL NOT PURGE OUTSIDE OF OPERATION PERIODS


TO ENSURE THAT ALL THE SETTINGS WILL WORK PROPERLY, TIME CLOCK AND PURGE MUST BE TO AUTO

1

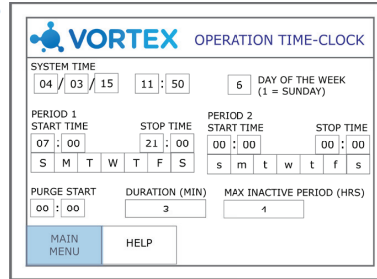


-TOUCH **MAIN MENU**

2

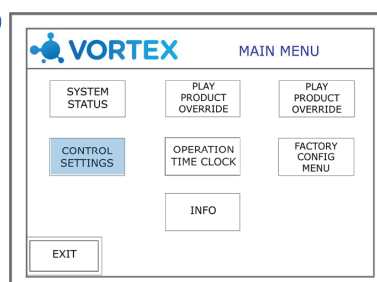

-TOUCH **CONTROL SETTINGS**

3

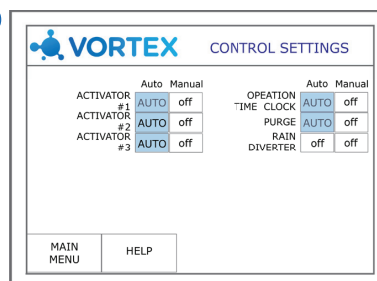

-TOUCH **AUTO**

CAPITAL LETTERS "AUTO" INDICATE THE FUNCTION IS ACTIVE. LOWER CASE "off" MEANS IT IS NOT ACTIVE

SETTING THE OPERATION TIME CLOCK TO MANUAL WILL OVERRIDE THE CLOCK AND ALLOW THE SYSTEM TO RUN ALL DAY