




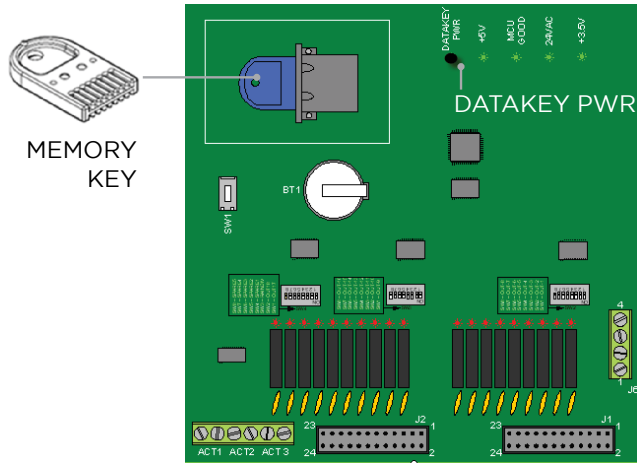

USER GUIDE | SMARTFLOW™ LOGICS CONTROLLER - NEW MEMORY KEY

INSERT A NEW MEMORY KEY


The SMARTFLOW™ LOGICS CONTROLLER comes with a pre-loaded sequence and firmware that can only be changed using a memory key provided by Vortex.



BEFORE INSERTING/REMOVING MEMORY KEY, ENSURE THAT THE SMARTFLOW LOGICS CONTROLLER IS OFF AND THAT THE DATAKEY PWR GREEN LED IS OFF. Failure to comply with this instruction may cause damage to the controller and void all warranties.

- 1  - **POWER OFF** THE SMARTFLOW
- 2  - **OPEN** THE CONTROLLER BOX
- 3  - ENSURE THAT THE **DATAKEY PWR GREEN LED IS OFF**
- 4  - **REMOVE OLD MEMORY KEY** (if present). **INSERT** THE NEW **MEMORY KEY**. MEMORY KEY CAN BE INSERTED EITHER SIDE.

UPLOAD A NEW SEQUENCE

- 1  - PRESS **ENTER**
- PRESS **ARROW LEFT TWICE**

- 2  - PRESS **ENTER** TO EXECUTE

UPDATE THE FIRMWARE

- 1  - PRESS **ENTER**
- PRESS **ARROW LEFT**

- 2  - **ENSURE** that the **On Key value is newer (higher)** than the current version
- PRESS **ENTER** TO EXECUTE