

INSTRUCTIONS |

SIEMENS TOUCHSCREEN - TOUCH CALIBRATION

MODEL TP177A ADJUSTMENT PROCEDURE

1. Shut the power by turning the knob to OFF.
2. Turn the power back ON.
3. Wait during Screen initialization process.
4. A temporary menu will briefly appear. Quickly press the **Control Panel** button.
5. Press the **OP** button twice rapidly.

CALIBRATING THE TOUCH SCREEN

Proceed as follows:

STEP 1 | Open the OP Properties dialog box then touch the “**Touch**” tab.

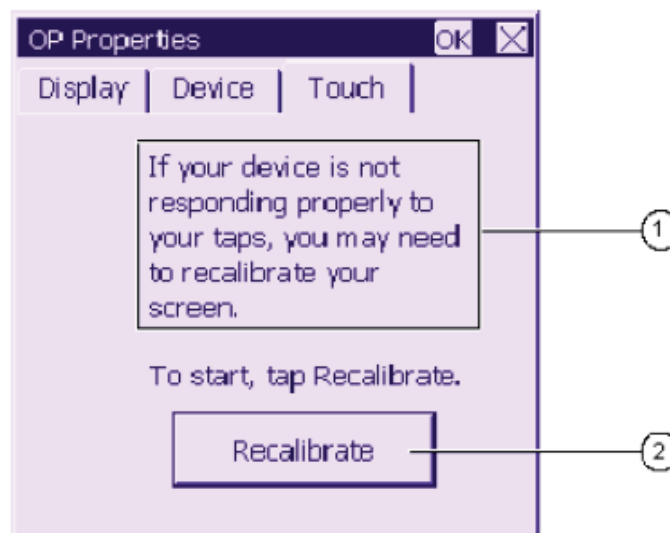


Figure 1 "OP Properties" dialog, "Touch" tab

STEP 2 | Touch the “**Recalibrate**” tab.

STEP 3 | Follow the instructions on the HMI device screen.

STEP 4 | Close dialog box with **OK**

STEP 5 | Press START to continue to **Main Menu** login.



World leader in aquatic play solutions with over
6,000 installations worldwide
vortex-intl.com • info@vortex-intl.com
1.877.586.7839 (free USA/CND) • +1.514.694.3868 (Intl.)