

TROUBLE SHOOTING | FLOW METER ISSUE

STEP 1 | Verify that the flow is not the issue and that it's correct;

STEP 2 | Remove red cap on top in order to purge the air. (Attention not to lose the inside indicator);

STEP 3 | Remove from the piping and clean out possible debris;

STEP 4 | Replace flow meter;

